

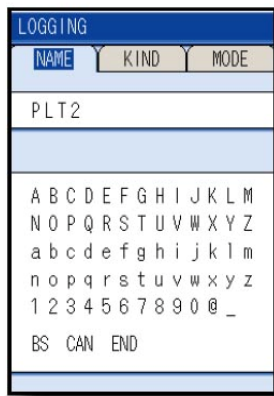



- For logs that exceed an hour or longer, manually setting up a log process is recommended.
- Begin by going to the “DATA LOGGER” menu, then select “2: LOGGING”.

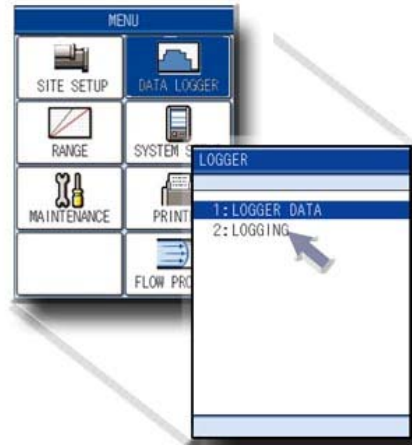

- Once “LOGGING” is selected, the log setup process begins with inputting a desired name for your log.
- When finished, hit “END” to move on...


- The next step involves activating the measurements you want displayed on your log file.
- Menu 1/2 contains Flow Units whereas menu 2/2 contains Thermal Units.

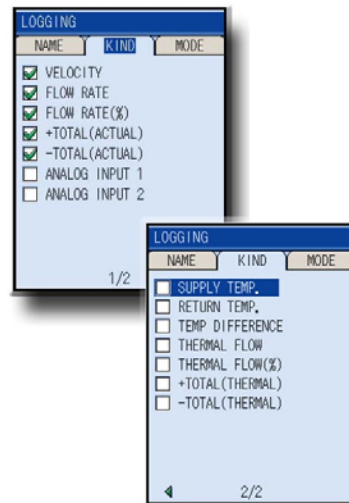

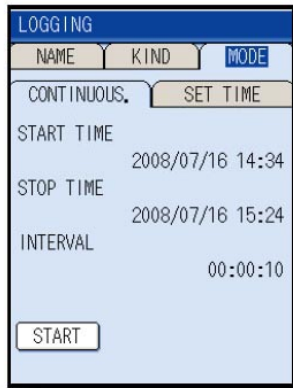

- From the “MODE” Menu, hit to the right to move onto the “CONTINUOUS” tab and press enter.
- From here we can set the start and end time of our log, as well as the logging interval.
- Once finished, hit “START” to set the log in queue. It will begin at the appointed time.

- Once a log is finished, you can verify your log files via the “LOGGER DATA” menu.
- The Log Files are stored on the SD card located in the bottom of the FSCS.

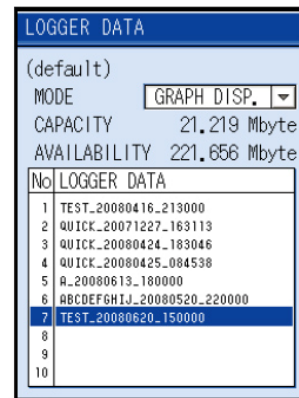

- Simply remove the card, insert into your PC and copy the log files over. The files are conveniently formatted in Excel and Microsoft Text Doc formats.